



# Mission SlidePro Friction Breaking Tool

## Auto Activating - De-Activating Calculator

Canada Contact

Jason Bjornson 403 512 0572

# Deactivated Zone

| Well Details         |                          |
|----------------------|--------------------------|
| Well Name            | Exampe Auto SlidePro Max |
| KOP                  | 1900 m MD                |
| End of Build Section | 2300 m MD                |

| Slide Pro Setup       |          |
|-----------------------|----------|
| Distance from Bit     | 1600 m   |
| Average Pressure Drop | 2800 kPa |
| Activation Setting    | 50       |



| Tool Auto Activation and De-Activation   |                    |
|--|--------------------|
| The SlidePro Friction Breaking Tool uses an internal mechanism to lock the axial vibration motion in the vertical section. As the SlidePro tool approaches the build section, the tool unlocks to generate a stronger friction breaking motion. The SlidePro FBT will also de-activate when pulled back into vertical. |                    |
| SlidePro Activation Point  | Sliding 1443 m MD  |
| Kick Off Point   | 1900 m MD          |
| SlidePro Activation Point  | Rotating 1648 m MD |
| Results Depth  |                    |
| SlidePro Depth Activation  | 1648 m MD          |
| Bit Depth Activation   | 3248 m MD          |
| Sliding Bit Depth at Activation  | 3043 m MD          |
| Rotating Bit Depth at Activation   | 3248 m MD          |

No Ball or Dart required.